


## **How to Measure Fire Column Covers - Design 5**

## **Measurement Instruction**

- ✓ Give exact measurement from edge to edge.
- ✓ "We add upto 2" leeway on the given width/depth for easy pull-in and pull-out."
- ✓ The height dimensions will remain same as provided by you.

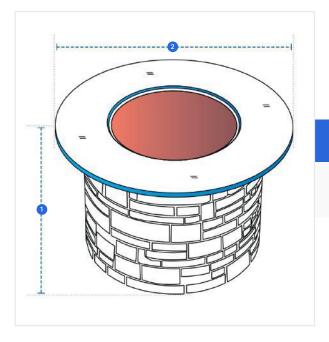

## **Measurement (Inches)**

1. Height





2. Diameter



## 1. Height:

Height of the Fire Column

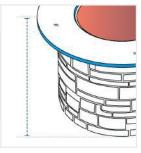

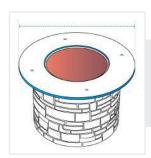

2. Diameter:

Diameter of the Fire Column